

Product Information

EC520 En-V[®] High Production Clearcoat

Product Description

EC520 En-V High Production Clear coat is engineered specifically for use with ENVIROBASE[®] High Performance Waterborne Basecoat. This clearcoat utilizes the *En-V* Resin technology to meet the throughput demands of any shop while delivering a premium appearance and excellent gloss retention. EC520 is ideal for 1-4 panel repairs with ease of application built into the design, consistent with the characteristics of every *En-V* clearcoat. EC520 *En-V* High Production Clearcoat is compliant in all North American refinish markets.

Preparation of Substrate







- Wash all surfaces to be painted with soap and water, then apply the appropriate ONECHOICE®, GLOBAL REFINISH SYSTEM® or DELTRON® cleaner. Ensure that the substrate is thoroughly cleaned and dried both before and after application work
- Wet sand with US 500 600 / European P800 P1200 grade paper or dry sanding with US 400 500 / European P600 P800 grade paper.
- Wash off residue and dry thoroughly before re-cleaning with appropriate cleaner. The use of a SX1070 *OneChoice* tack rag is recommended.

pPG

© 2017 PPG Industries EB-520 10/17

APPLICATION GUIDE:

Mixing Ratio for EC520 En-V High Production Clearcoat



EC520: 3 parts ECH5075: 1 part ECRxx/DT18xx/D87xx: 1 part

Pot Life at 70°F (21°C): 45 minutes

Hardener:

ECH5075 Standard Hardener

Reducer:

ECR65 Low Temp Reducer DT1845 Compliant Reducer Normal DT1850 Compliant Reducer Medium Mid Temp Reducer ECR75 Compliant Reducer Slow ECR85 High Temp Reducer DT1855 ECR98 Hot and Humid Ultra High Temp Reducer D8764 Fast Compliant Thinner D8774 Medium Compliant Thinner See reducer selection guide on page 4 for additional information D8767 Slow Complaint Thinner

ECR98 is the required retarder for all markets.

Optional Additives:



SLV814 Universal Flexibilizer:add 10% to RTS volumeSL93LV Acceleratoradd 2% to RTS volumeSLV73 Fisheye Eliminator:add 1 oz. to RTS quart

SLV814 Universal Flexibilizer is recommended not required for plastic parts

Spray Gun Set-up and Pressure:



Fluid Tip:

Spray Viscosity:

HVLP:

Compliant:

1.2 - 1.4 mm

14 - 15 secs DIN4 at 70°F (21°C)

10 maximum psi at the cap

29 - 40 psi at the gun

Note: Refer to the spray gun manufacturer's recommendations for optimum inlet air pressures.

Application:



Apply: 2 medium wet coats.

Film Build:

Minimum dry film build:2.0 milsMaximum dry film build:3.5 milsRecommended wet film build per coat:2.0 - 2.5 milsRecommended dry film build per coat:1.0 - 1.5 mils

Flash Off at 70°F (21°C):



Flash: 3 - 5 minutes between coats

Drying Times:



Dust-free: 70°F (21°C) 30 - 35 minutes

70 F (21 C) 50 - 55 minutes

Air Dry to Re-assemble:

70°F (21°C) 1.5 - 2 hours



Force Dry:

120°F (49°C) 20 minutes

140°F (60°C) 15 minutes - minimize metal temperatures exceeding 140°F (60°C)

Tape Time: 1.5 - 2.5 hours

70°F (21°C)

IR (Infrared): NA

© 2017 PPG Industries 2 EB-520 10/17

Overcoat / Recoat / Polishing:



Overcoat/Recoat Time: 2 hours after recommended air dry or force dry bake cycle.

Re-Repair: Re-repair area must be sanded appropriately before recoating with primer, color or

clearcoat

9

Overcoat with: Envirobase High Performance primer, color or clearcoat.

Polishing: After recommended air dry or force dry and cool down, minor dirt nibs can be removed.

Sand with P1500 or finer and follow normal polishing procedures.

Performance Guidelines:

Allow basecoat to thoroughly dry before applying EC520 *En-V* High Production Clearcoat. If allowed to dry longer than 24 hours, additional basecoat must be applied before clearcoating. The timing will depend on film thickness, temperature and humidity.

Technical Data:


RTS Combinations	EC520 : ECH5075 : ECRxx/DT18xx/ D87xx	EC520 : ECH5075 : ECRxx/DT18xx/ D87xx + SLV814 Flex Additive	EC520 : ECH5075 : ECRxx/DT18xx/ D87xx + SL93LV Accelerator	EC520: ECH5075: ECRxx/DT18xx/ D87xx + SLV73 Fisheye Eliminator
Applicable Use Category	Clear Coating	Clear Coating (Flexed)	Clear Coating	Clear Coating
Weight Ratio:	3:1:1	3:1:1+10%	3:1:1+2%	3: 1 : 1 + 1 oz. RTS qt.
VOC Actual (g/L)	58 - 153	56 - 145	56 - 152	56 - 150
VOC Actual (lbs./ US gal.)	0.48 - 1.28	0.47 - 1.21	0.47 - 1.27	0.47 - 1.25
VOC Regulatory (less water, less exempt (g/L)	114 - 248	114 - 242	113 - 249	114 - 248
VOC Regulatory (less water, less exempt (lbs./ US gal.)	0.95 - 2.07	0.95 - 2.02	0.94 - 2.08	0.95 - 2.07
Density (g/L)	1,117 - 1,176	1,125 - 1,180	1,121 - 1,178	1,119 - 1,176
Density (lbs./ US gal)	9.32 - 9.81	9.39 - 9.85	9.36 - 9.83	9.34 - 9.81
Volatiles wt.%	56.0 - 58.3	57.4 - 59.8	57.0 - 59.2	57.1 - 59.6
Water wt.%	0.0	0.0	0.0	0
Exempt wt.%	42.2 - 53.3	44.6 - 54.9	43.4 - 54.3	43.8 - 54.7
Water vol.%	0.0	0.0	0.0	0
Exempt vol.%	38.0 - 49.1	39.9 - 50.5	38.8 - 50.1	39.4 - 50.6
RTS Solids vol.%	43.9 - 44.0	42.9 - 3.0	43.2 - 43.3	42.8 - 42.9
RTS Solids wt.%	41.7 - 44.0	40.2 - 42.6	40.8 - 43.1	40.4 - 43.0
Sq. Ft. Coverage at 1 mil. at 100% transfer efficiency	704 - 706	688 - 690	693 - 695	687 - 688

EC520 En-V High Production Clearcoat Reducer Selection Guide

Higher Air Movement Temperature and Humidity (Larger)

Average Air Flow & Humidity 12,000-24,000 CFM - 30%-90% RH

Lower Air Movement Temperature and Humidity (Smaller)

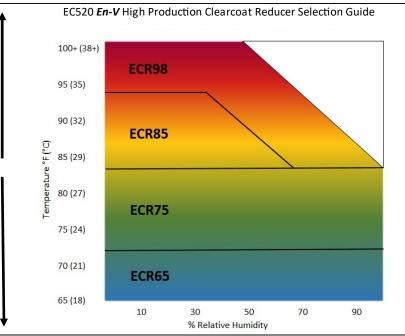

For Repairs greater than 3 panels consider using the next higher temperature reducer

Temperature, Air Flow, Humidity and Size of the Repair will affect Reducer selection

HEALTH AND SAFETY

See Material Safety Data Sheet and Labels for additional safety information and handling instructions.








- The contents of this package may have to be blended with other components before the product can be used. Before opening the packages, be sure you understand the warning messages on the labels and MSDS of all the components, since the mixture will have the hazards of all its parts.
- Improper handling and use, for example, poor spray technique, inadequate engineering controls and/or lack of proper Personal Protective Equipment (PPE), may result in hazardous conditions or injury.
- Follow spray equipment manufacturer's instructions to prevent personal injury or fire.
- Provide adequate ventilation for health and fire hazard control.
- Follow company policy, product MSDS and respirator manufacturer's recommendations for selection and proper use of respiratory protection. Be sure employees are adequately trained on the safe use of respirators per company and regulatory requirements.
- Wear appropriate PPE such as eye and skin protection. In the event of injury, see first aid procedures on MSDS.
- Store waterborne and solvent borne waste separately. A competent agent with appropriate certification must handle all waterborne wastes. Wastes must be disposed in accordance with all Federal, State, Provincial and local laws and regulations.
- Always observe all applicable precautions and follow good safety and hygiene practices.

Emergency Medical or Spill Control Information: (412) 434-4515; In Canada (514) 645-1320

Materials described are designed for application by professional, trained personnel using proper equipment and are not intended for sale to the general public. Products mentioned may be hazardous and should only be used according to directions, while observing precautions and warning statements listed on label. Statements and methods described are based upon the best information and practices known to PPG Industries. Procedures for applications mentioned are suggestions only and are not to be construed as representations or warranties as to performance, result, or fitness for any intended use, nor does PPG Industries warrant freedom from patent infringement in the use of any formula or process set forth herein.



PPG Automotive Refinish 19699 Progress Drive Strongsville, OH 44149 800.647.6050

Follow us online:







www.ppgrefinish.com

2301 Royal Windsor Drive, Unit #6 Mississauga, Ontario L5J 1K5 888.310.4762

PPG Canada Inc.

The PPG Logo, We protect and beautify the world, Envirobase, En-V, Deltron, OneChoice, Global Refinish System and PaintManager are trademarks of PPG Industries Ohio, Inc.